


# Easy Programming Guide for the Kenwood TM-V7A

by Steven Hicks - W5NLR

---

1. Press **BAND SEL** to select the VHF or UHF band. "PTT" appears above the VHF or UHF frequency to show which band you have selected.
1. Press the **VFO** button
2. Enter your desired frequency by rotating the tuning knob or entering the frequency directly from the microphone keypad
3. Press **TONE** to activate the Tone function for repeaters requiring a PL/Encode tone.
4. Press **F (1 s)**, then **T.SEL**. The current tone frequency appears.

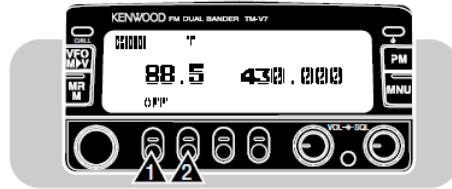

5. Turn the **Tuning Control**, or **Mic UP/DWN** to select a tone frequency.
6. Press **OFF** to complete the setting.
7. Press **F** button, then **SHIFT** to select **PLUS** or **MINUS** offset
8. To store all this information into Memory, push the **F** button, and when the memory numbers appear above the frequency display, turn the main tuning knob to the memory number of your choice.
9. Immediately press the **MR** button to store the information.
10. To recall the memory channel you just entered, just press **MR** again.